

Dr Brown's

natural flow®



Deluxe Bottle Warmer
Model 850T

EN IMPORTANT SAFEGUARDS

This product is for household use only.

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
 - Do not touch hot surfaces. Use handles or knobs.
 - To protect against electrical shock, do not immerse cord or plugs in water or other liquid.
 - Close supervision is necessary when any appliance is used by or near children.
 - This appliance can be used by children aged from 3 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 3 years.
 - Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
 - Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
 - Misuse of the product may cause potential injury.
 - The heating element surface is subject to residual heat after use.
 - The use of accessory attachments not recommended by Handi-Craft™ Company may cause injuries.
 - Do not use outdoors.
 - Do not let cord hang over edge of table or counter, or touch hot surfaces.
 - Do not place on or near a hot gas or electric burner, or in a heated oven.
 - Extreme caution must be used when moving an appliance containing hot liquids.
 - To operate, plug cord into wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
 - Do not use appliance for other than intended use.
 - Never immerse the warmer or power cord in water.
 - Avoid spillage on the connector.
 - When in use, the warmer contains hot water. Be careful to avoid spilling or splashing any water on yourself when removing contents from the warmer.
 - Before serving be sure food is at a safe temperature.
 - Warming food for long periods is not recommended.
 - Before feeding, pour a few drops of the liquid content from the baby bottle on to the back of your hand to test the temperature.
- CAUTION:** Always check the content temperature of the bottle or the small jar before feeding your baby.
- Before serving, unplug cord from wall outlet and dish. Do not leave cord within child's reach.
 - This appliance is designed to be used for domestic and like applications such as:
 - staff kitchen areas in shops, offices and other working environments,
 - farms,
 - use by hotel, motel customers and other accommodation environments,
 - bed and breakfast environments.
 - Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Children shall not play with the appliance.
 - If the supply cord is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified person in order to avoid hazard.

SAVE THESE INSTRUCTIONS


Thank you for buying the Dr. Brown's Natural Flow® Deluxe Bottle Warmer. It has been designed and developed to provide moms, dads and other caregivers an easy, reliable way to warm baby bottles and baby food jars. The unit accommodates 60 ml, 120 ml, 240 ml and 250 ml Dr. Brown's baby bottles. It also holds most major competitive brand baby bottles, as well as small jars and containers of baby food.

As parents ourselves we know that sometimes feeding a young baby can be a time of increased stress, especially if the baby is upset or fussing. Preparing a bottle often has to be done while holding the baby and trying to comfort them. Dr. Brown's is introducing this innovative new product to make warming baby bottles and food jars simpler and easier.

Please read through the ENTIRE INSTRUCTION BOOK including the IMPORTANT SAFEGUARDS before using your new Dr. Brown's Natural Flow® Deluxe Bottle Warmer for the first time. A copy of these instructions is also available online at www.drbrownsbaby.com.

Parts:

- A. Hinged lid
- B. Main housing
- C. Removable water reservoir
- D. Control panel and LCD timer display
- E. Removable basket
- F. Reversible riser

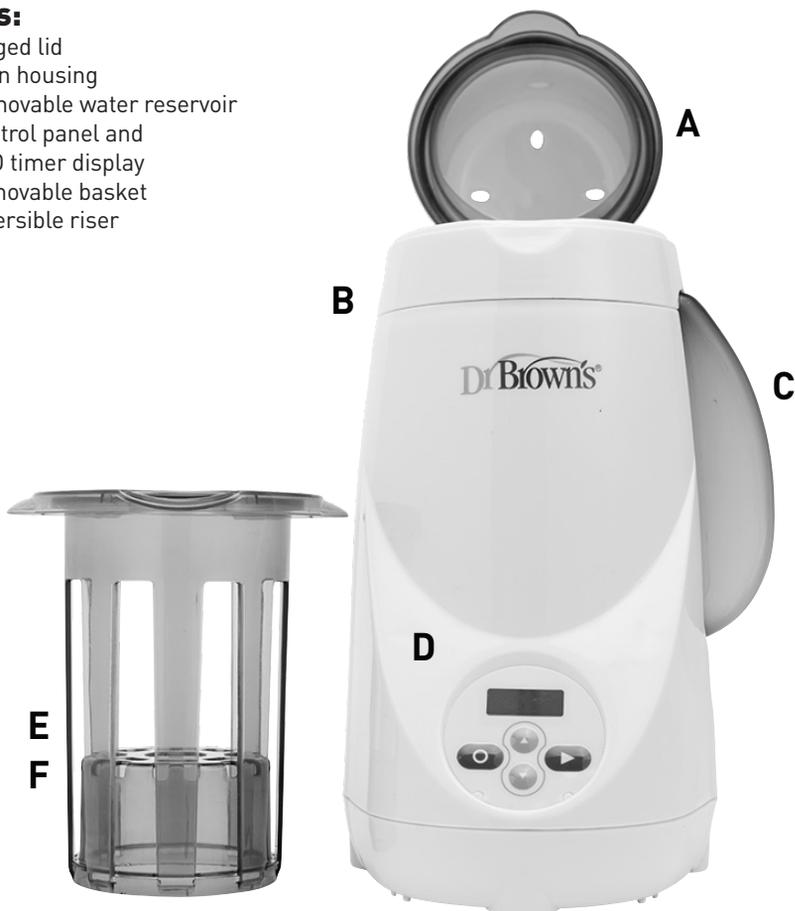

KEY FEATURES:

1. A water reservoir that is refillable so the user only needs to add water to the appliance every 6-12 bottle warming cycles. Plus the added benefit of not needing to empty the remaining water after each use.
2. An adjustable removable basket that configures for easy, fast and reliable warming of 60 ml, 120 ml, 240 ml and 250 ml Dr. Brown's bottle sizes. Standard size food jars can be heated. Soothers/Pacifiers and small nursery items can be sterilised. The unit will also hold many competitors' bottle sizes.
3. A hinged lid on top of the heating chamber is always closed during the warming cycle to keep steam inside the appliance which creates more efficient and safer heating in less time. Opens for easy access to remove the bottle or jar.
4. A user programmable warming cycle. This appliance allows the user to determine the appropriate heating time based on the starting temperature of the formula and the amount of liquid and keeps that time stored in the unit's memory. This results in a 1-button start function for quicker bottle warming.
5. A 4-button digital keypad to set time and turn the appliance on/off. The "last time programmed" is stored in memory and is displayed when the appliance is turned on. The LCD timer counts down. There is an audible 5-beep alarm with flashing LCD when the heating cycle is complete.
6. A backlit display for use at night.
7. Automatic power off after 8 minutes.
8. Automatic over-heating shutdown switch.
9. Soft feet for stability.
10. Convenient cord storage on the bottom of the unit.

UNPACKING:

When unpacking the appliance for the first time, carefully remove and dispose of all packing materials. Simply snap the hinged lid in place making sure the parts are fully engaged, and you're ready to start to use. (SEE FIGURE 1)



FIGURE 1

PREPARING FOR USE:

1. Position the Dr. Brown's Natural Flow® Deluxe Bottle Warmer on any convenient flat surface. Be sure to place it and the electrical cord out of the reach of children.

NOTE: Always ensure the appliance is unplugged when inserting the water reservoir.

2. Remove the water reservoir from the right side of the main housing.
3. Turn the water reservoir upside down so the small fill opening is facing up. Fill the reservoir with water through that opening. (SEE FIGURE 2)

NOTE: DO NOT EXCEED the recommended amount of water. Please note that hard water may increase build up or other residue on the heating plate. If you have hard water, we recommend that you use distilled water.

4. Position the short neck of the fill opening (with the reservoir's flat side up) into the bottom of the slot on the appliance's right side. Pivot the reservoir up to a vertical position and snap into place. (SEE FIGURE 3) Make sure it's held firmly in place.
5. The water reservoir will now automatically fill the heating chamber inside the appliance to the proper level.

NOTE: The Dr. Brown's Natural Flow® Deluxe Bottle Warmer is unique and convenient because you don't have to fill the reservoir every time you want to use it. The translucent reservoir also acts as a gauge. Simply keep your eye on the fluid level and refill the reservoir when you can no longer see water inside the reservoir. During each refill, unplug warmer, empty heating chamber and rinse with clean water. Do not immerse warmer base in water.

6. Insert the plug into wall outlet.



FIGURE 2



FIGURE 3

TO PROGRAM THE CYCLE TIME:

These following times are to be used as a preliminary guide only. There are many variables that can affect how fast this appliance warms a bottle or food container, such as the size of the container, the exact starting temperature of the contents and the type of liquid/food being warmed. All of these factors will impact how the appliance heats the contents and the final temperature that is reached.

When you begin to use this appliance, you will need to make adjustments to the length of time to achieve the most appropriate final temperature. The appliance will keep the "last time used" in memory so once you determine the best time for a specific amount of liquid, you can simply insert another bottle and press the start button.

Use the following chart as a **STARTING POINT ONLY** to estimate the proper time for the appropriate heating cycle. Start by using information from the chart but adjust the length of time based on the actual results you achieve.

NOTE: MOST FROZEN BOTTLES REQUIRE TWO CYCLES TO WARM. BE SURE TO OBSERVE THE WARMING TIMES BELOW. THIS WARMER FEATURES AN 8-MINUTE CYCLE LIMIT TO AVOID OVERHEATING FOR THE SAFETY OF MOM AND BABY.

Always refer to the estimated time for the amount of liquid you are warming — not the bottle size. For example, if you are warming 120 ml of liquid in a 250 ml bottle, refer to the 120 ml warming instructions.

STANDARD BOTTLE/ NARROW/PLASTIC	STARTING TEMPERATURE (before warming)	ESTIMATED TIME (minutes)
60 ml Liquid	Room temperature (22°C)	2:10
60 ml Liquid	Refrigerator (4°C)	3:00
60 ml Liquid	Freezer (-18°C)	8:00 + :30
120 ml Liquid	Room temperature (22°C)	2:30
120 ml Liquid	Refrigerator (4°C)	3:55
120 ml Liquid	Freezer (-18°C)	8:00 + 1:05
250 ml Liquid	Room temperature (22°C)	3:00
250 ml Liquid	Refrigerator (4°C)	5:00
250 ml Liquid	Freezer (-18°C)	8:00 + 3:30

GLASS BOTTLE	STARTING TEMPERATURE (before warming)	ESTIMATED TIME (minutes)
120 ml Liquid	Room temperature (22°C)	2:00
120 ml Liquid	Refrigerator (4°C)	2:50
120 ml Liquid	Freezer (-18°C)	7:00
250 ml Liquid	Room temperature (22°C)	2:30
250 ml Liquid	Refrigerator (4°C)	4:20
250 ml Liquid	Freezer (-18°C)	8:00 + 2:10

NOTE: DO NOT FREEZE DR. BROWN'S BOTTLES WITH THE VENT SYSTEM IN PLACE. WE SUGGEST THAT YOU WARM THE BOTTLE AND FROZEN FLUID, AND THEN REASSEMBLE THE VENT SYSTEM BEFORE USE.

CAUTION: If using glass bottles, use only glass thermo-resistant bottles, as sudden temperature change may cause glass to break.

WIDE-NECK BOTTLE/ plastic	STARTING TEMPERATURE (before warming)	ESTIMATED TIME (minutes)
120 ml Liquid	Room temperature (22°C)	2:20
120 ml Liquid	Refrigerator (4°C)	4:00
120 ml Liquid	Freezer (-18°C)	8:00 + 3:00
240 ml Liquid	Room temperature (22°C)	3:20
240 ml Liquid	Refrigerator (4°C)	5:35
240 ml Liquid	Freezer (-18°C)	8:00 + 6:10

FOOD JAR	STARTING TEMPERATURE (before warming)	ESTIMATED TIME (minutes)
120 ml	Room temperature (22°C)	2:30
120 ml	Refrigerator (4°C)	2:45

CAUTION: Heating frozen food jars with this warmer is NOT RECOMMENDED. Always thaw them first.

Never heat an empty bottle or jar in this product.

PACIFIER OR SMALL ACCESSORY STERILIZATION	ESTIMATED TIME
Soother/Pacifier	2:00

TO OPERATE THE APPLIANCE:

1. Remove any protective cap, position the bottle or jar in the basket and then place it into the heating chamber.

NOTE: The basket has 2 parts. The bottom section can be turned upside down so that smaller bottles sit higher up in the heating chamber and are easier to remove.

(SEE FIGURE 4)



FIGURE 4

CAUTION: Before warming Dr. Brown's bottles in this appliance, **always remove all bottle components** before warming to prevent the vent from leaking fluid if gas forms during warming. If leaking occurs during warming, pour out any remaining water in the appliance's heating chamber and reservoir, and refill the reservoir with fresh water.

NOTE: To empty the heating chamber, unplug the product and remove the reservoir from the side. With the cover open, tip the unit over a sink with the reservoir opening facing up and drain any remaining fluid from inside the heating chamber through the top opening.

2. Close the cover. Never use this appliance without the basket insert in place and properly adjusted for the bottle or jar size.

CAUTION: DO NOT open the lid of the heating chamber once the heating cycle has been started.

3. Press any button on the keypad (except 0) to display the "last time used". If correct, press >. If you want to adjust the time, press the up arrow button to increase the length of time or the down arrow button to decrease the time.

NOTE: Pressing and holding an arrow button will cause the timer display to change very fast. To change the timer slowly, push and release the arrow button so the numbers move incrementally. Once the display shows the desired time, press start button.

(SEE FIGURE 5)



FIGURE 5

4. When the heating cycle is complete the display will flash 00:00 for 60 seconds and then shut off. At that time, there will be 5 audible beeps that indicate that cycle time you selected is complete and the bottle or food is ready to be removed from the appliance. You can open the top of the product at this point.

NOTE: You can turn the appliance off anytime by pressing the 0 button.

CAUTION: Be careful of the steam rising out from the heating chamber. DO NOT put your hands on or around the heating chamber during or immediately after the heating cycle.

5. Grasp the side tabs of the basket and remove it immediately to prevent residual heating. Place it on the countertop and remove the bottle or jar. (SEE FIGURE 6)
6. Gently swish the fluid in the bottle around or stir the food thoroughly so the temperature becomes uniform throughout the container.
7. ALWAYS TEST THE TEMPERATURE OF THE FLUID OR FOOD BEFORE FEEDING YOUR BABY.

NOTE: The appliance is programmed to automatically reduce the time for an additional heating cycle started within 15 minutes of the end of the previous cycle. If you heat a second bottle immediately, you will see that time is reduced by a pro-rated amount unless you override the feature and set a new time yourself.

NOTE: The appliance is equipped with an internal sensor that will automatically shut the unit off if it gets too hot or runs out of water. The switch will automatically reset once the unit cools down.

NOTE: For microbiological and hygienic reasons, once milk or food is heated, it should not be re-heated again and should be discarded if not used immediately. Please consult your health professional for further guidance about safety recommendations on feeding.

TO CLEAN THE APPLIANCE:

- Always unplug the appliance and ensure it is cool before cleaning any part.
- Remove water reservoir and empty all water out of the unit.
- Wipe the exterior surfaces as well as the inside of the heating chamber with a damp cloth or sponge using mild soap. DO NOT submerge the unit in any water or liquid.
- Removable baskets are dishwasher safe (top rack) or wash with soapy water. Rinse with clean water. Air dry.
- DO NOT use scouring pads, abrasives, bleach or solvents for cleaning.
- DO NOT disassemble the product. There are no serviceable parts inside.

TO DE-SCALE THE APPLIANCE:

For best results and easiest care, it is recommended to use distilled water. It is important to de-scale this appliance every 4 weeks to ensure that it continues to work properly. Pour all remaining water out of the water chamber and reservoir. To de-scale, mix 2 oz (50 ml) of white vinegar with 4 oz (100 ml) of cold water in the water reservoir, and then run the mixture through the bottle warmer as you normally would until any scaling has been removed. Please ensure proper ventilation when descaling with vinegar.